

## TERRA SERIES\* SERVICE PARTS

		TERRA 2500 Part # 1125260	TERRA 2500SR Part # 1125270	TERRA 3500 Part # 1135260	TERRA 3500SR Part # 1135270	TERRA 4500 Part # 1145260	TERRA 4500SR Part # 1145270
CONTENTS	DESCRIPTION	PART NUMBER					
1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 40	Motor Assembly	90-42672	90-42672	90-42675	90-42675	90-42678	90-42678
1, 8, 13, 29, 32, 34, 35, 38, 40, 42, 43, 44, 45	Small Parts Kit	90-42693	90-42693	90-42693	90-42693	90-42693	90-42693
N/A	Circuit Breaker (Not Shown)	87-14541	87-14541	87-14541	87-14541	87-14541	87-14541
N/A	Contactora (Not Shown)	90-42681	90-42681	90-42681	90-42681	90-42681	90-42681
N/A	Handlebar Switch (Not Shown)	90-42687	90-42687	90-42687	90-42687	90-42687	90-42687
N/A	Fairlead, Hawse (Not Shown)	87-42619	87-42619	87-42619	87-42619	87-42620	87-42620
N/A	Fairlead, Roller (Not Shown)	87-41340-01	87-41340-01	87-41340-01	87-41340-01	87-41340	87-41340
N/A	Power Cable Kit (Not Shown)	90-42684	90-42684	90-42684	90-42684	90-42684	90-42684
N/A	Remote Control (Not Shown)	2275	2275	2275	2275	2275	2275
N/A	Rope, Synthetic (Not Shown)	87-42613	87-42613	87-42613	87-42613	87-42614	87-42614
N/A	Rope, Steel Cable Wire (Not Shown)	87-42611	87-42611	87-42611	87-42611	87-42612	87-42612
N/A	Socket Assembly (Not Shown)	90-42690	90-42690	90-42690	90-42690	90-42690	90-42690

\*Service parts shown apply to the new generation Terra Winches only. **DOES NOT** apply to old Terra part numbers (1125220, 1125230, 1135220, 1135230, 1145220, and 1145230).

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1125260-1-1-20	O-Ring, Motor	2
2	1125260-1-1-25 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-25 (Terra 4500/4500SR)	Spring, Brake UTV	1
3	1125260-1-1-27 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-27 (Terra 4500/4500SR)	Adapter, Driveshaft-Brake	1
4	1145240-1-1-9	Motor Contact Housing	1
5	1125260-1-1-26 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-26 (Terra 4500/4500SR)	Adapter, Motor-Brake	1
6	1145240-1-1-17	Nut, Serrated Flange M6	4
7	1125260-11-6	Washer, Flat M6	4
8	1125260-1-1-29	O-Ring, 8mm O.D.	4
9	1125260-1-1-13	Motor Cap	1
10	1125260-1-1-5	Stator - Permanent Magnet	1
11	1125260-1-1-1 (Terra 2500/2500SR/3500/3500SR) 1145260-1-1-1 (Terra 4500/4500SR)	Drum Support - Motor End UTV	1
12	1125260-1-1-6 (Terra 2500/2500SR) 1135260-1-1-6 (Terra 3500/3500SR) 1145260-1-1-6 (Terra 4500/4500SR)	Rotor, UTV	1
13	1145240-1-1-7	Ball Bearing, 32mm O.D.	1
14	1145240-1-1-15	Retainer, Terminal Screw	2
15	1145240-1-1-16	Screw, Square Head M6	2
16	1125260-1-1-14	Insulator, Blue	1
17	1125260-1-1-28	Insulator, Yellow	1
18	1125260-1-1-18	Screw, Cap Head M5-0.8 x 125mm	2
19	1125260-11-5	Washer, Flat M5	2
20	1125260-1-3-3	Gearbox Plate	1
21	1125260-1-3-97	Clutch Mechanism	1
22	1125260-1-3-96	Clutch Handle	1
23	1125260-1-3-5	Ring Gear, 3rd Stage UTV	1
24	1125260-1-3-6 (Terra 2500/2500SR) 1135260-1-3-6 (Terra 3500/3500SR/4500/4500SR)	1st Stage Planetary Assembly	1
25	1125260-1-3-8 (Terra 2500/2500SR) 1135260-1-3-8 (Terra 3500/3500SR/4500/4500SR)	2nd Stage Planetary Assembly	1
26	1125260-1-3-4	Screw, Cap Head M5-0.8 x 14mm	2
27	1125260-1-3-9	3rd Stage Planetary Assembly	1
28	1125260-1-4-1 (Terra 2500/2500SR /3500/3500SR) 1145260-1-4-1 (Terra 4500/4500SR)	Drive Shaft	1
29	1125260-1-4-6	Spring, Clutch	1
30	1125260-1-4-4	Retaining Washer	3
31	1125260-1-4-3	Gear, Drum Hub	1
32	1125260-1-5 (Terra 2500/2500SR/3500/3500SR) 1145260-1-5 (Terra 4500/4500SR)	Tie Bar	2
33	1125260-1-8 (Terra 2500/3500) 1125270-1-8 (Terra 2500SR/3500SR) 1145260-1-8 (Terra 4500) 1125270-1-8 (Terra 4500SR)	Drum, Narrow Steel (Terra 2500/3500) Drum, Narrow Synthetic (Terra 2500SR/3500SR) Drum, Standard Steel (Terra 4500) Drum, Standard Synthetic (Terra 4500SR)	1
34	1145240-1-1-2	Drum Bearing	2
35	1145240-1-1-3	Drum Gasket	2
36	1125260-1-6	Screw, Cap Head M5-0.8 x 20mm	2
37	1125260-1-7	Screw, Cap Head M5-0.8 x 25mm	2
38	1125260-1-3-2	Face Seal, UTV	1
39	1125260-1-3-1	Gearbox/Drum Support	1
40	1125260-1-1-24	Snap Ring, 34mm ID Groove	1
41	1125260-1-9	Set Screw M6	1
42	90-42693-11	O-Ring, Clutch	1
43	1125260-1-3-95	Thrust Bearing, 3rd Stage	1
44	1125260-1-3-85 (Terra 2500/2500SR) 1135260-1-3-85 (Terra 3500/3500SR/4500/4500SR)	Thrust Bearing, 2nd Stage	1
45	1125260-1-3-65 (Terra 2500/2500SR) 1135260-1-3-65 (Terra 3500/3500SR/4500/4500SR)	Thrust Bearing, 1st Stage	1

Terra 2500/2500SR/3500/3500SR/4500/4500SR

