



PART NUMBERS:


S106105: For SI 8000, 10000, 12000, and 15000 Hydraulic Winches



CONTENTS

ITEM	QUANTITY	DESCRIPTION
1	2	SMALL O-RING
2	1	U-RING HYDRAULIC BRAKE SEAL
3	2	DISK SPRING
4	4	BRAKE DISK, FIXED
5	3	BRAKE DISK, ROTATING
6	1	LARGE O-RING
ANTI-SEIZE LURRICANT MUST RE USED ON ALL STAINLESS STEEL EASTENERS TO PREVENT THREAD DAMAGE AND GALLING		

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

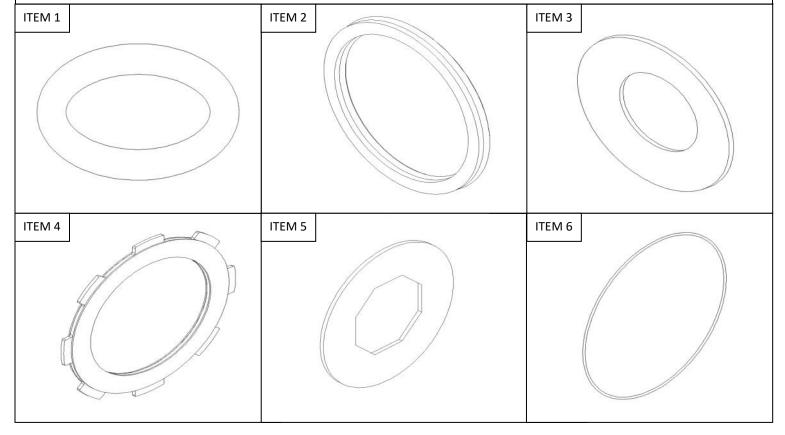



INSTALLATION INSTRUCTIONS


- 1. Remove contents from box, verify if all parts listed are present and free from damage. Failure to identify damage before installation could lead to a rejection of any claim.
- 2. Carefully read and understand all instructions before attempting installation. Ensure that all mounting hardware is torqued to specifications prior to use.


P.N.: 75-S106105-RevA ECO #: W22-0093 Date: 9/14/2022

- 3. Remove the original brake tube. See Figure 1.
- 4. Remove both 90-degree elbows.
- 5. Remove and replace the small O-rings on the 90-degree elbows (item 1). See Figure 2.
- 6. Remove the motor assembly by removing the two socket head bolts holding it in place. See Figure 3.
- 7. Remove the motor mount/brake housing by removing the eight socket head bolts. See Figure 4.

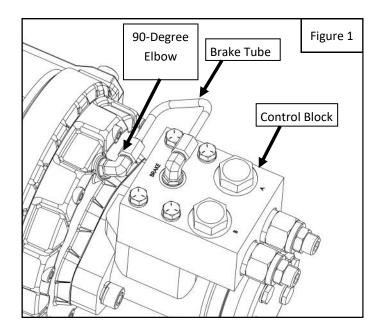

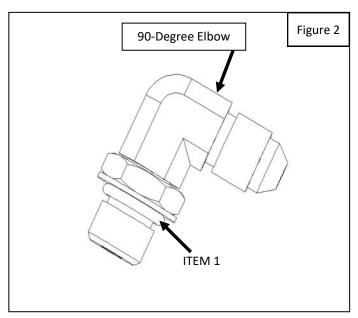


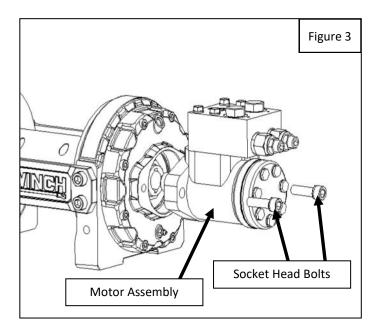


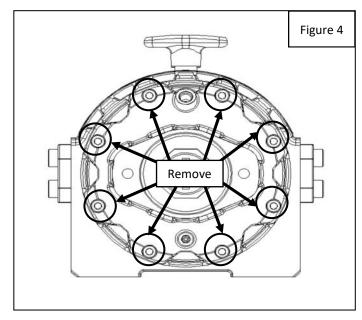


SUPERWINCH

- 8. Remove and replace the U-ring hydraulic brake seal (item 2) from inside the motor mount/brake housing. See Figure 5.
- 9. Remove original large O-Ring. See Figure 6.
- 10. Remove original brake disks, fixed and brake disks, rotating. See Figure 7.

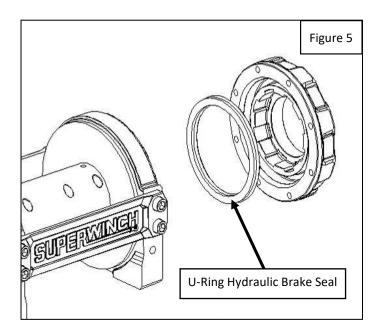


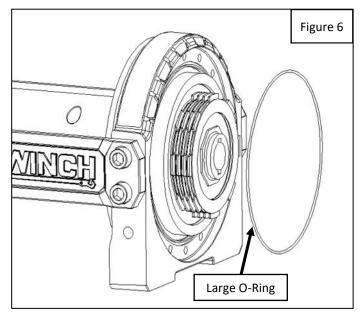


Date: 9/14/2022

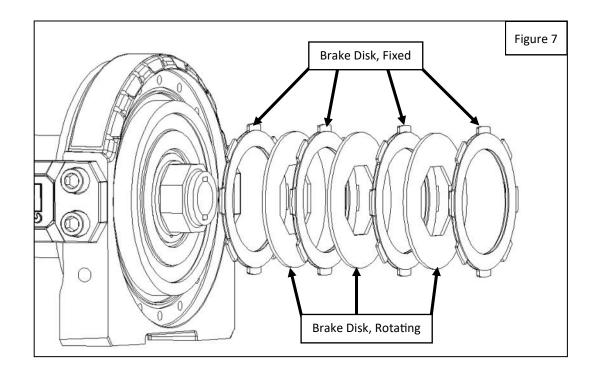

- 11. Remove the pressure plate, brake drive, and thrust washer. See Figure 8.
- 12. Remove and replace the Disk Springs (item 3). See Figure 9.
- 13. Reinstall the pressure plate, brake drive, and thrust washer.
- 14. Install the replacement brake disks, fexed (item 4) and brake disks, rotating (item 5). See Figure 7.
- 15. Install the replacement large O-ring (item 6). See Figure 6.
- 16. Reinstall the motor mount/brake housing.
- 17. Reinstall the motor assembly.
- 18. Reinstall the 90-degree elbows and brake tube.

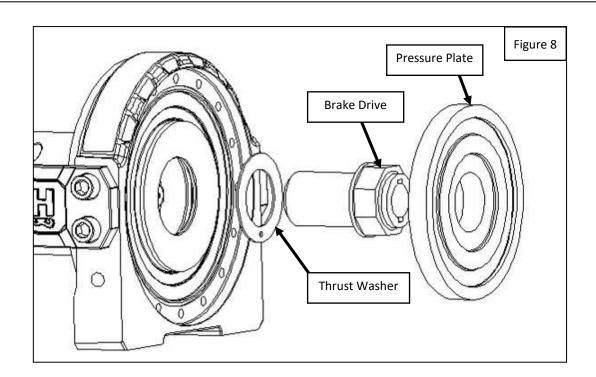

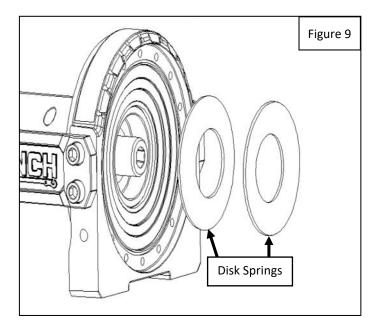

SUPERWINCH

WARNING

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All SUPERWINCH supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov

5 SUPERWINCH

P.N.: 75-S106105-RevA ECO #: W22-0093 Date: 9/14/2022





For more information on this and other products, or to be put in contact with a Superwinch sales rep or distributor, call (800) 323-2031 or email info@superwinch.com

SUPERWINCH 320 W. COVINA BLVD. SAN DIMAS, CA 91773

© 2019 SUPERWINCH®, Superwinch®, and S Superwinch® (design) are registered trademarks of Superwinch Inc. in the United States and/or other countries.